

Immersion Temperature Sensors

Issue Number: 7.0 Date of Issue: 08/12/2016



Features & Benefits

- Weatherproof Housing
- Wide range of sensing element types
- Stainless steel probe
- Optional probe lengths, 65, 150 & 250mm
- Hinged lid with the facility of tamper proofing

Technical Overview

This range of temperature sensors are used to detect liquid temperature in pipes. Units contain either a high quality thermistor, Nickel or Platinum sensing element.

Immersion sensors are for direct mounting into the TT-PO range of stainless steel pockets.

The -CVO active output option combines 4 pre-set ranges and selectable output mode, customised output range scaling enabling a choice of outputs and ranges on one unit.

Product Codes

TT-341 Immersion Sensor

Sensing Element (add type to above code)

Passive output:

-A	(10K3A1) Trend, Cylon, Distech
-В	(10K4A1) Andover, Delta Controls

-C (20K6A1) Honeywell -D (PT100a) Serck

(PT1000a) Cylon -E -F (NI1000a) Sauter

-G (Ni1000a/TCR(LAN1)) Siemens

-H (SAT1) Satchwell -L (TAC1) TAC

(2.2K3A1) Johnson Controls -M

-N (3K3A1) Alerton -P (30K6A1) Drayton -Q (50K6A1) Ambiflex -R (100K6A1) York >40°C -S (SAT2) Satchwell -T (SAT3) Satchwell

-W (SIE1) Siebe (STA2) Landis & Staefa -Y -Z (10K NTC) Carel

Active output:

-cvo 4-20mA/0-10Vdc selectable output

-CVO-C 4-20mA/0-10Vdc selectable output with custom

temp. scaling

Suffix (at extra cost):

65mm Probe length -250 250mm Probe length

Specification

Output types:

Resistive Passive

Current 4-20mA or Active (selectable)

Voltage 0-10Vdc

Accuracy:

±0.2°C 0 to 70°C Thermistor PT100a ±0.2°C @ 25°C PT1000a ±0.2°C @ 25°C ±0.4°C @ 0°C NI1000 -CVO ±0.4°C @ 25°C

Probe:

Material Stainless steel

65, 150, 250mm x 6mm dia. Dimensions

Housing:

Material ABS (flame retardant type VO)

Dimensions 75 x 70 x 50mm

Protection:

 
Snap-shut lid

IP65 (See installation notes)

Ambient range -30 to 70°C Weight 160g Country of origin UK

-65

WEEE Directive:



The TT-341-CVO products referred to in this data sheet meet the requirements of EU Directive 2014/30/EU



Immersion Temperature Sensors

Issue Number: 7.0 Date of Issue: 08/12/2016

Installation

- 1. Select a location in the system where the liquid is to be measured, install pocket as per datasheet TT-PO.
- 2. Insert the probe into the pocket and secure with the grub screw provided within the pocket.
- 3. The TT-341 must be used with a pocket, it is not designed for direct mounting.
- 4. Release the snap-fit lid by gently squeezing the locking tab and feed the cable through the waterproof gland & terminate the cores at the terminal block. Leaving some slack inside the unit, tighten the cable gland onto the cable to ensure water tightness.
- 5. If the sensor is to be mounted outside, it is recommended that the unit be mounted with the cable entry at the bottom. If the cable is fed from above then into the cable gland at the bottom, it is recommended that a rain loop be placed in the cable before entry into the sensor.
- 6. Snap shut the lid after the connections have been made if IP65 protection is required, secure the lid with two screws provided.

Connections


All connections to BEMS controllers, data recorders etc. should be made using screened cable. Normally, the screen should be earthed at one end only (usually the controller end) to avoid earth hum loops which can create noise. Low voltage signal and supply cables should be routed separately from high voltage or mains cabling. Separate conduit or cable trays should be used. Where possible, the controller's earth should be connected to a FUNCTIONAL EARTH, rather than the mains safety earth. This will provide better immunity to high frequency noise. Most modern buildings have a separate earth for this purpose.

Passive output:



Connections are made via the 2-way terminal block. Connections for thermistor, platinum and nickel sensing elements are polarity independent.

Active output:

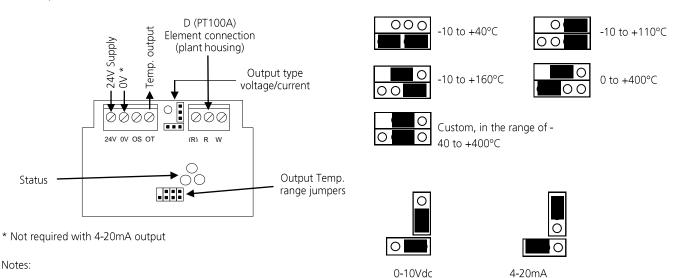

Voltage output Nominal voltage 24Vac/dc.

Current output If using in current output mode, the sensor must only be used with a 24Vdc supply. The sensor may be damaged if supplied

with AC

The selectable output temperature ranges are dependent on sensor type, ambient and application.

For full connection and specification please refer to the TT-CVO data sheet.

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.